


QUICK SETUP

Model : TX-SR606




Thank you for purchasing this product.
This quick setup sheet shows the typical hookup method for connecting speakers and AV components (DVD player, TV, cable/satellite receiver).
For more detailed hookup information and operating instructions, please see the Instruction Manual.

Speaker Layout (Main Room)

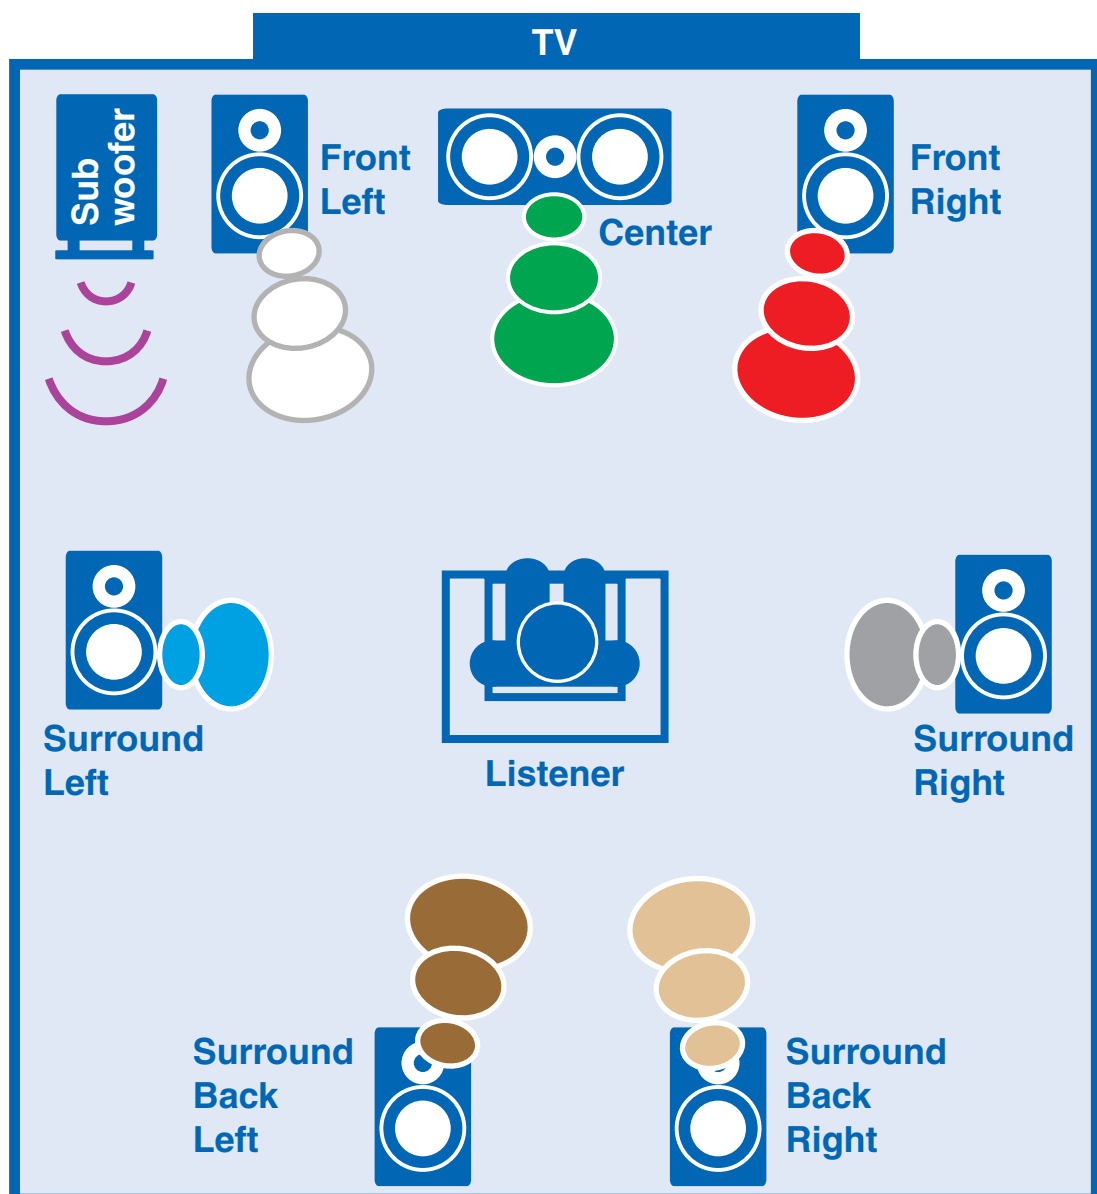

Speaker Hookup

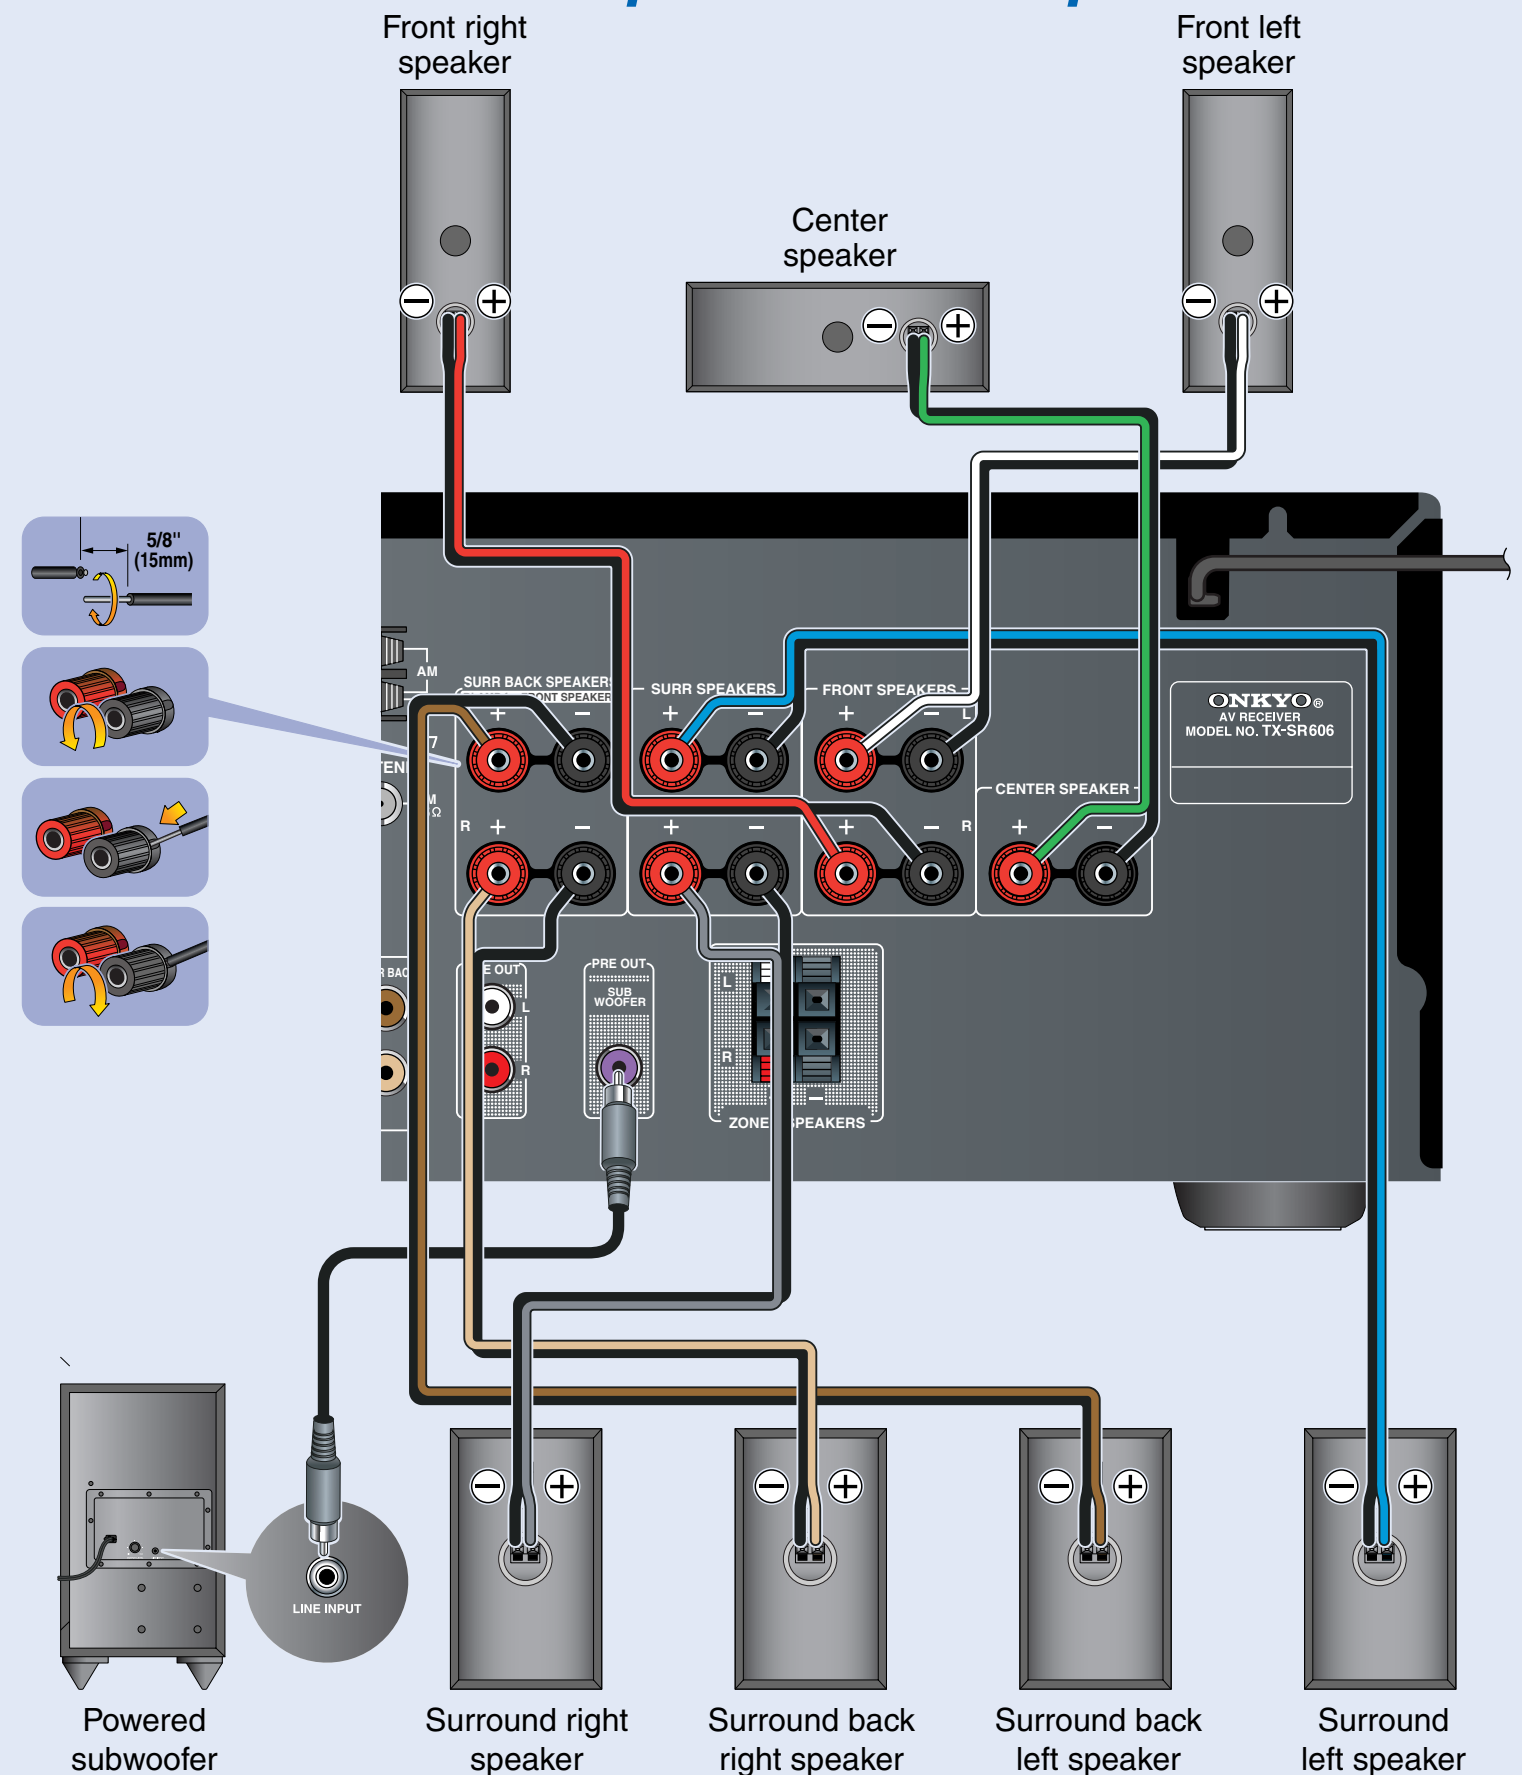

See the other side of this sheet for the AV component hookup.



AV Component Hookup

See the other side of this sheet for the Speaker hookup.





With an HDMI cable you can send both audio and video with a single cable, making connecting simple and keeping wires neat. If you have an HDMI-compatible TV and players, you can connect them to the AV receiver with HDMI cables. Digital audio signals received at HDMI IN inputs are output by the speakers and headphones connected to the AV receiver.

IF NO HDMI





If your TV or player doesn't support HDMI, use the analog or digital connections shown below.

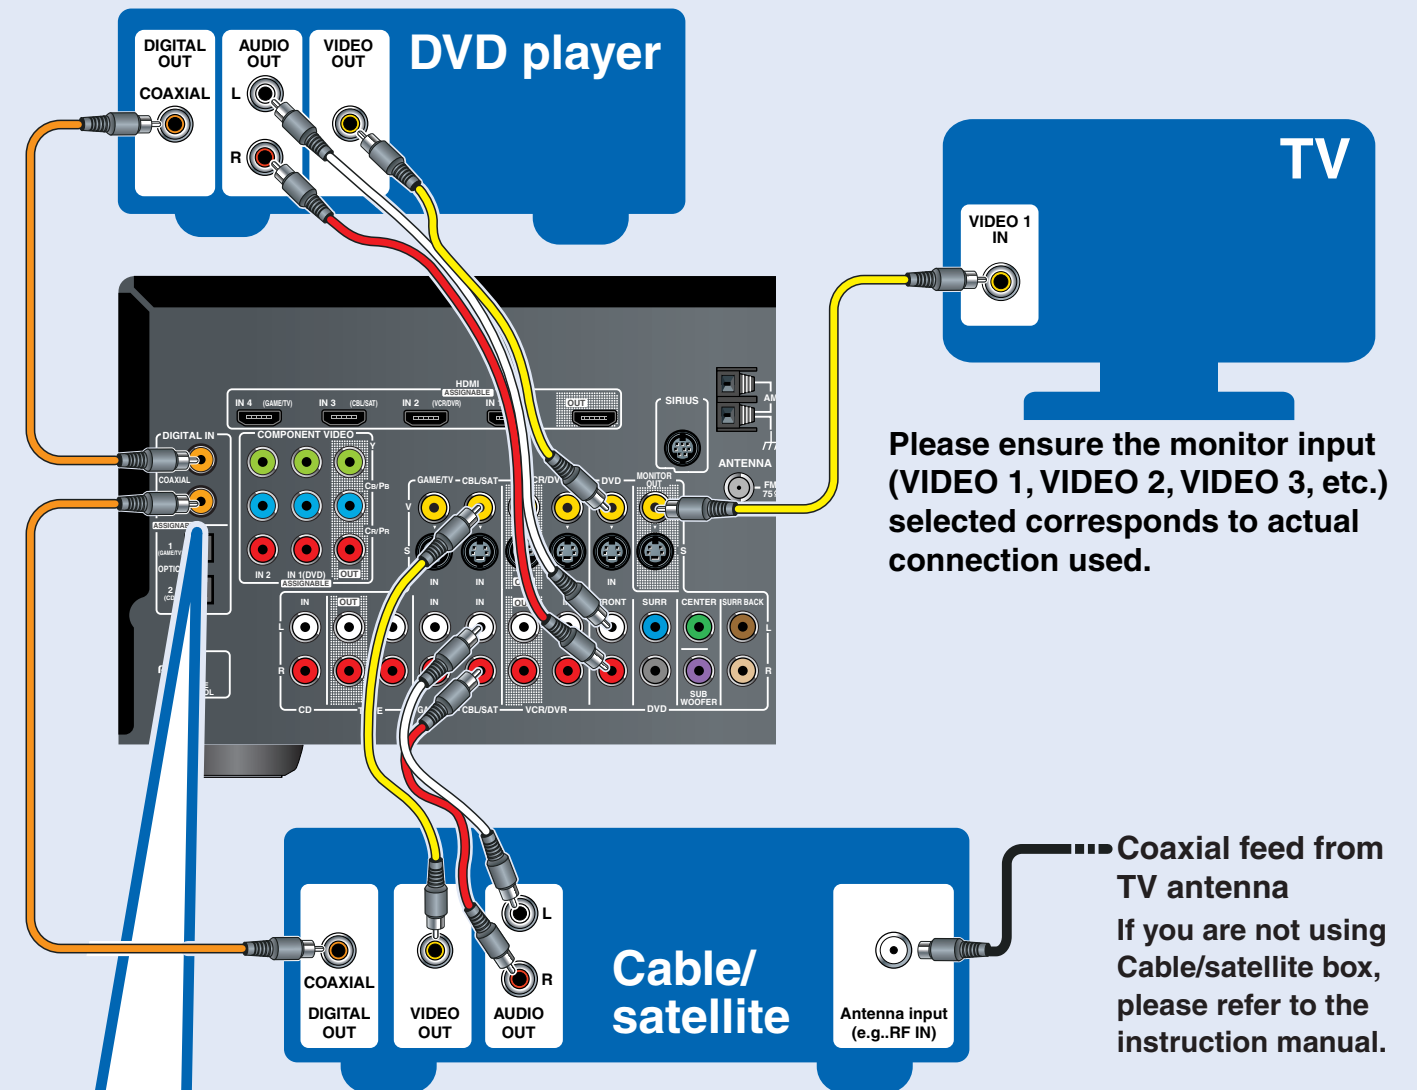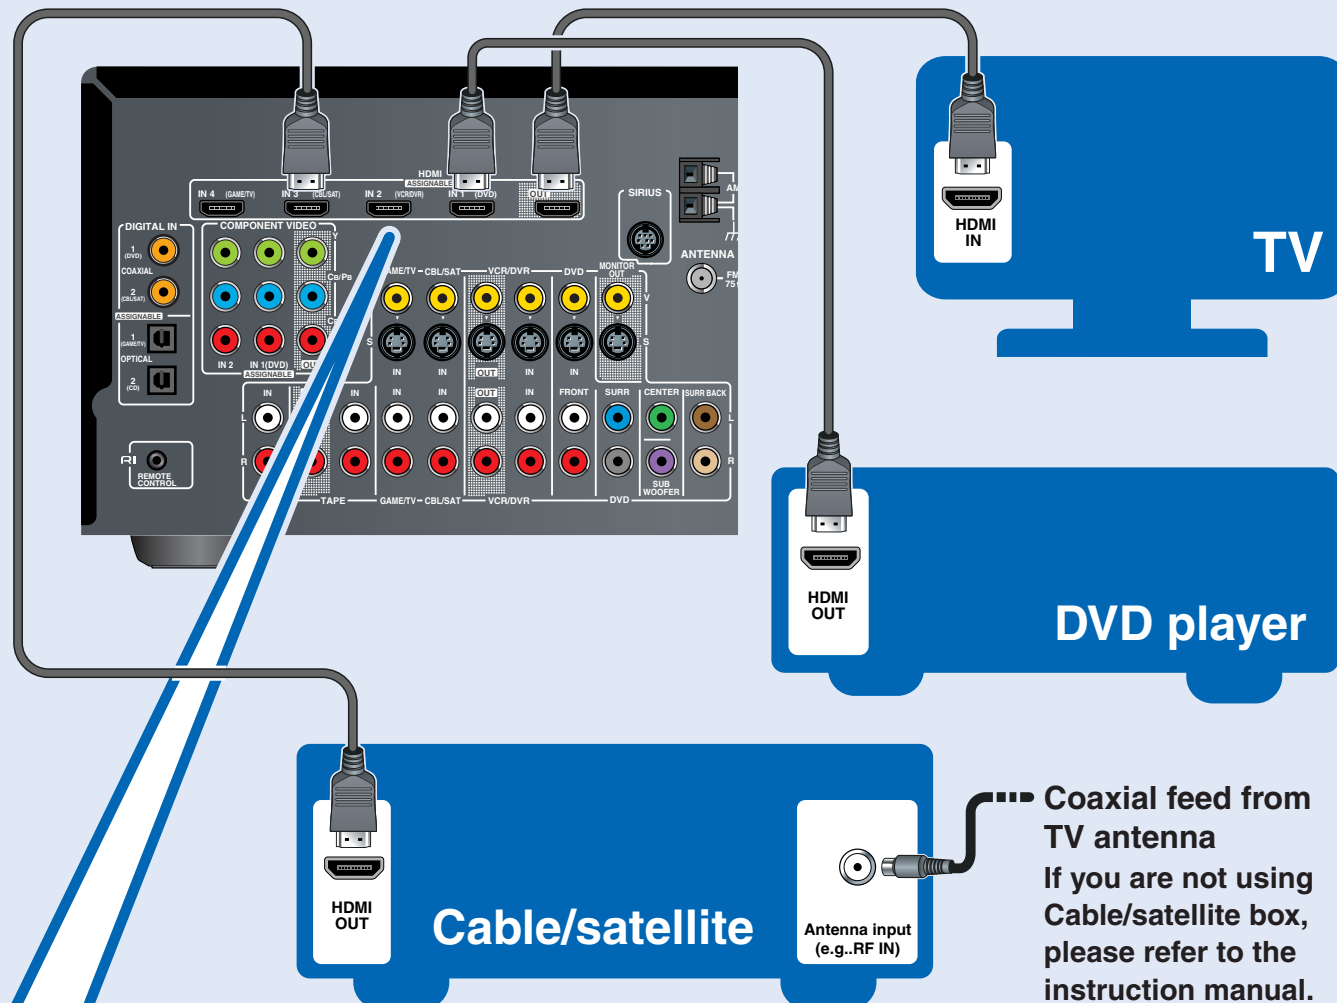

Assigning the HDMI Input

If there's no picture on your TV, you'll need to assign the HDMI inputs as necessary using the onscreen setup menus. If you connect your DVD player to the AV receiver's HDMI1, and connect your cable or satellite receiver to HDMI3, as shown above, it's not necessary to change the default assignments.

On the front panel

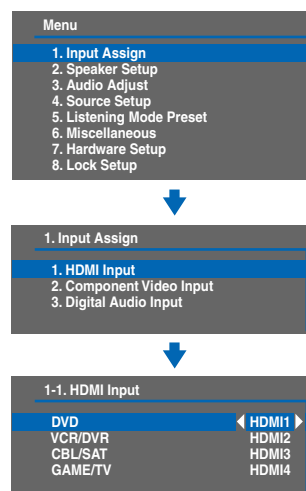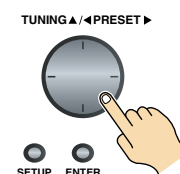

Assigning the Digital Input

If there's no sound, you'll need to assign the digital inputs as necessary using the setup menus on the TX-SR606's display. If you connect your DVD player to the AV receiver's COAXIAL 1 DIGITAL IN, and your cable/satellite receiver to the COAXIAL 2 DIGITAL IN, as shown, it's not necessary to assign the digital input.

The onscreen setup menus appear only on a TV that is connected to the HDMI OUT. If your TV is connected to the composite video or S-Video MONITOR OUT, or the COMPONENT VIDEO OUT, use the TX-SR606's display when changing settings.

On the front panel

